

## Contact customer service

WELCOME TO CONTACT NORDEN'S CUSTOMER SERVICE REPRESENTATIVES.

NORDEN MACHINERY AB  
*(Mailing address)*  
P O Box 845  
SE-391 28 Kalmar

*(Shipping address)*  
Prästkragevägen 15  
SE-393 61 Kalmar  
SWEDEN

Tel. +46 (0)480 44 77 00  
Tech. Service, dir. +46 (0)480 44 76 00

Email: [customer.service@nordenmachinery.se](mailto:customer.service@nordenmachinery.se)  
[service@nordenmachinery.se](mailto:service@nordenmachinery.se)

[www.nordenmachinery.com](http://www.nordenmachinery.com)



Get **more**  
out of **tubes**



## QUICK START GUIDE: HOT AIR NOZZLE



**NORDEN**  
a coesia company

## Hot Air nozzle


The hot air nozzle and the cooling ring are matched to the specific tube dimensions and they are consequently size dependent.

### Safety

- Handle the nozzle with care!
- Make sure that the heating is switched off and the cooling water turned off before changing the nozzle.
- Water may leak out when removing the nozzle from the hot air station.

### Parts

1. Hot air nozzle
2. Gasket
3. Cooling ring
4. O-rings

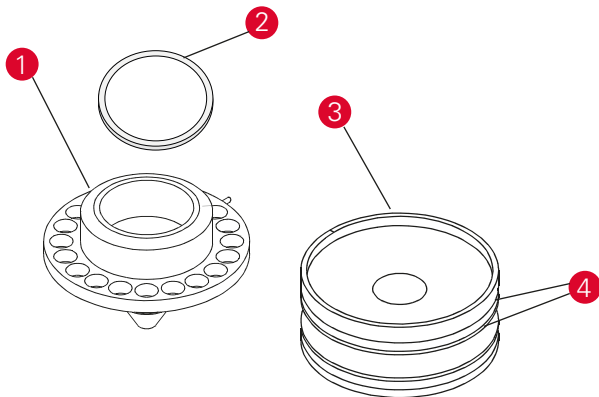


## DISMANTLING THE NOZZLE



BEFORE CHANGING THE NOZZLE, WAIT AT LEAST FIVE MINUTES TO LET THE HEATING STATION COOL OFF.

1. Remove the nozzle from the holder.
2. Press out the cooling ring from the holder.
3. Inspect all o-rings and gasket, if needed, replace them.

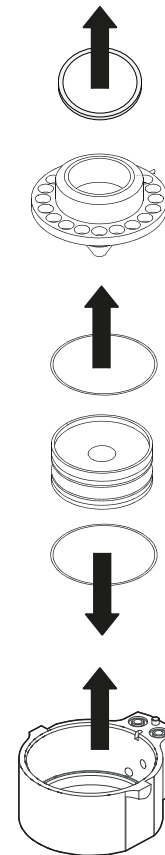

## ASSEMBLING THE NOZZLE

1. Press the cooling ring into the holder.
2. Place the nozzle in the holder. Make sure that it is correctly placed in the holder (locating pin in slot).

Make sure that the two small o-rings and the gasket are in the correct position before mounting the holder on the hot air station.

*For full instructions we refer to your Norden machine manual.*

